

# Digi-Tel Stereo Digital Recorder / MP3 Player

## - Helpful Tips and Quick Start Steps -

Congratulations the purchase of our Mini Digital Recorder, Phone Recorder, and MP3 Player! After just a few uses, all of the features will become second nature to you - without referring to the instructions. Our manufacturer has kept the MENU as easy to use and navigate as possible so that you won't waste time getting to the feature you need to use. **Note:** For the best sound clarity, always use your included stereo headphones when listening to your recorded files.

\* **Button Usage and Legend** - (Note: Some steps require a "quick press" - others require you to HOLD the button)

▶■ = "Quickly Press and Release" to Play or to Stop Play

▶▶ = "Press and Hold" to Forward through a file...or..."Quickly Press and Release" to Skip to the next file

◀◀ = "Press and Hold" to Rewind through a file...or..."Quickly Press and Release" to Skip to the previous file

VOL + / VOL - = Volume up or down

M = Mode / REC = Start Recording, Stop Recording, Save Recording



## "HOW TO" - Quick tips for the most frequently used features.

**Record a new message:** - Power ON the recorder, select your recording mode, and then quickly press **REC** and release it.

**Stop recording a message while recording:** - Quickly press **REC** and release it.

**Playback your message:** - Power On the recorder, use ▶▶ or ◀◀ to select a file number, then quickly press ▶■ and release it.

**Stop the playback while the message is playing:** - Press ▶■

**Repeat part of a message while the message is playing back:**

- Quickly press and release the REC button. An "A" will appear on the screen (this is where it will begin to repeat)
- Quickly press and release the REC button again. A "B" will appear on the screen (this is where it will stop repeating)
- >> The section you have marked will play over and over without stopping.
- To stop the repeating playback feature...Quickly press and release either "M" or "REC"

**To a single delete a message:** - Use ▶▶ or ◀◀ to select a file number to erase, press ▶■ to play the file, press ▶■ again to stop the file. Now, press and hold "M" for two seconds - then release "M"...when "DELETE ONE" appears on the screen...press "M"...only the message you selected will be erased.

**NOTE:** After selecting the VOS recording mode from the MENU, you still need to press REC for the process to begin. As stated on our site, if the incoming phone call is not loud enough, or the connection is poor, the recorder will PAUSE and not record your call. Should this occur, switch out of the VOS mode and commence to record in the continuous mode. \* The VOS mode always defaults to the "SP" mode of recording.

> **MP3 Music Playing and file downloads:** In the MP3 Mode, navigation is much the same and can be learned quickly - after just a few uses. Connect the recorder to your PC to drag and drop your music or data files - just as you would a standard flash memory stick or thumb drive.

>> The Driver installation from the mini CD is not required for operating systems newer than Windows 98. However, you can install and use the Sound Converter software from the mini CD to change your .ACT format files to .WAV formatted files.

**Legal reminder:** Always record legally and contact or seek the advice of an attorney before engaging in any recording scenario that may invade the privacy rights of others - or that may break any of your local, state, and federal laws.

Enjoy your recorder, and we hope to serve you again soon.

The Geek Factor, LLC. 1986-2009 All rights reserved. ([www.thegeekfactor.com](http://www.thegeekfactor.com), [www.the-geek-factor.com](http://www.the-geek-factor.com), [www.spy-tronix.com](http://www.spy-tronix.com))