

MP3 SPORT WATCH

- quick tips -

You'll find that your new MP3 Sport Watch will be very easy to operate after just a few uses. The basic steps are shown below and are only meant to supplement your Instruction Manual that was included with your purchase.

PLAYING YOUR MP3 MUSIC: (1) Turn the Power ON by pressing the (Power/ON/OFF/Play/Pause) button. Wait 10 seconds. The red light at the 12:00 position will illuminate along with the yellow light at the 1:00 position. This is the default mode.

(2) Press the (Power/ON/OFF/Play/Pause) button again and the mp3 music will begin to PLAY. While the music is playing, press the MODE/RECORD button to change between the five Equalizer modes

(3) Press the (Power/ON/OFF/Play/Pause) button again to stop the music. You must use the earphones to hear the music when the watch is not connected to your computer's USB port. The watch does not have a built-in speaker.

VOICE RECORDING: (1) Turn the Power ON by pressing the (Power/ON/OFF/Play/Pause) button. Wait 10 seconds. The red light at the 12:00 position will illuminate along with the yellow light at the 1:00 position. This is the default mode.

(2) With the watch set as shown above in step 1, PRESS and HOLD the MODE/RECORD button for two seconds or until you see the ORANGE light start to blink above the 2:00 position. You are now recording.

(3) Press the MODE/RECORD button for 2-3 seconds and then release it to STOP AND SAVE the recording. In a second or two, the ORANGE stops blinking, and the Yellow light over the 1:00 position illuminates steadily. You have just saved a recorded file.

(4) Now that you have at least one voice recording stored in the watch and the yellow light is on steady:

(a) A quick press of the MODE/RECORD button will make the yellow light extinguish and the orange light over the 2:00 position illuminate steadily. With the orange light on steady, you can press the (PLAY) button to hear your recorded messages, or press the MODE/RECORD button to record another message.

(b) Pressing the MODE/RECORD button for two seconds will immediately begin a new recording.

Please Note:

When both the 1:00 and 2:00 position lights (yellow and orange) are flashing at the same time, it is because you have chosen a mode that is not available. Simply turn OFF the watch by holding the ON/OFF button for a few seconds, or you can also press the MODE button to return to a normal state. Anytime that you turn the watch OFF, and then back ON, it will have returned to its default state.

Again, we've sold literally thousands of these watches around the country with great success, and they are very easy to use and operate with just a little practice. – Enjoy.

256MB
512MB
1GB

