

Simple Usage Tips for your “Informer” Micro Camera:

(HIGH-RESOLUTION MODEL)

Congratulations on your purchase of our High Resolution Micro Informer Camera! You’ll find that it’s incredibly easy to operate the video/audio quality is excellent.



Connect the camera to the included USB port and then connect it to your computer or our optional power adapter if you purchased one; allow your camera to charge for about 3 full hours before you use it the first time. Subsequent charges need only be for 2-3 hours max. A full battery charge will supply you with approximately 2 hours of video recording before the battery will need to be re-charged. * Still image taking will increase your battery life. **REMEMBER:** This model does not have an internal memory built-in, but it does come with a 1GB Micro SD Card. Please insert your SD Card after charging if we did not insert it for you already.

AUDIO RECORDING ONLY: Your selector switch should be in the UP position (slide to RECORD). Slide the power switch to ON. The RED and BLUE lights will illuminate for approximately 2 seconds, and then the YELLOW light will begin to flash at about 1 time per second. (You are now recording AUDIO ONLY). > TO STOP your audio recording, simply slide the side switch DOWN to the VIDEO position.....The YELLOW light will stop blinking and the BLUE light will turn ON. Your AUDIO ONLY file is now saved on the flash memory card. Slide the switch UP to the RECORD position to begin recording another AUDIO ONLY file.

RECORDING VIDEO WITH AUDIO: With the power OFF, slide the side switch to VIDEO, and then slide the power switch to ON. The RED and BLUE lights will illuminate for approximately 2 seconds, and then the BLUE light will remain STEADY ON. Press and HOLD the Record/Stop “round” button on the face of the camera. When the blue light begins to BLINK at 1 blink per second – YOU ARE RECORDING VIDEO WITH AUDIO. Press and hold the “round” REC/STOP button to stop your video with audio recording. Too easy!

TAKING STILL IMAGES:Just as you did above.....With the power OFF, slide the side switch to VIDEO, and then slide the power switch to ON. HOLD switch should be in the DOWN position (in the same direction as the arrow). Slide the power switch to ON. The RED and BLUE lights will illuminate for approximately 2 seconds, and then the BLUE light will remain STEADY ON. Simply and quickly PRESS AND RELEASE Record/Stop “round” button on the face of the camera. You will see the 3rd LED light flash to YELLOW for about one second – You have just taken a still image picture and it is now saved on the flash memory. Press and release the button again to take more pictures, or you can press and HOLD it to begin taking video. Way too easy!

File Playback: Use the included USB cable to connect your Micro Camera to your PC or Laptop USB port. Your computer should recognize the device automatically. When you open the window for your Micro Camera – you’ll see all of your saved files. They’re saved in “.AVI” file format which can be viewed with your Windows Media player that is probably already installed on your PC. If you do not have it installed on your PC, then please know that any media player that recognizes .AVI files will work. If you cannot play the files on your computer – then please go to www.videolan.org to download their free media player. → Remember, you can use up to an 8GB Micro SD Card with this High Resolution model. / That’s it! After just a few uses, your Micro Informer will become second nature to you. Enjoy!

The Geek Factor, LLC.
www.spy-tronix.com
www.thegeekfactor.com
www.the-geek-factor.com