

Simple Usage Tips for your 4GB Voice Activated Key Chain DVR

General Info.: The DVR camera will record until the internal battery is drained, until you turn it OFF, or until the memory is full. If it turns off due to battery drainage - it will automatically save your recorded video before it powers off. A full 2-3 hour charge of your key chain will allow for 1 hour of recording. **NOTE: BUTTONS 2 AND 3 DO NOTHING AT ALL – do not push them.**

- (1) Slide the power switch DOWN – away from the USB port – the camera will turn ON and the Blue light will shine steady.
- (2) **Still Photo:** With the blue light ON – Press and release Button 1 – a yellow light will appear and then the blue light will come back on within 1 or 2 seconds....you've just taken a still image photo.
- (3) **Video:** With the blue light ON – Press and HOLD Button 1, it will start blinking in 2-3 seconds (release Button 1 after the blue light starts blinking) and then the blue light will disappear completely....you are now taking video with audio.
- (4) **Voice Activated Mode:** With the power ON and the blue light ON – slide the Voice Activated Recording (VOX) switch to the DOWN position (away from the USB port). In this setting, a voice or a normally audible sound makes the blue light begin to blink and then disappear as the DVR begins to record. If (approx. 3-5 minutes) goes by without any audible sounds – the DVR will STOP recording and go into a dormant mode. The blue light will come on as it begins this dormant mode, showing that it has just saved your last recording, and then it will begin to record when it hears another sound. If the DVR is 60 seconds into the dormant mode without hearing a sound, then the blue light will turn OFF and the DVR will enter a sleep mode to conserve battery power. When it hears a sound, the blue light will turn ON and get read to record, if it hears another sound – the blue light will blink as the camera begins to record again. Each new recording will be saved as it's own video file.

To Set the Time and Date Stamp: Your Key Chain DVR Camera is capable of marking your recordings with a Time and Date Stamp - great for evidence. Connect your Key Chain DVR to your PC's USB port – find the correct drive letter that it has been assigned – and open up the memory to the DVR. Then, go to our FAQ page at www.spy-tronix.com/FAQs.html Download our (.txt) template for the KEY CHAIN DVR and save it directly into the memory of your DVR. Open it up and enter in YOUR current date and time in the form of: YYYY-MM-DD HH:MM:SS for example 2008-08-14 14:25:00.

➔ Then, after you've correctly typed your current time and date in the format above, save this file and close it. Correctly remove the DVR from the computer. Turn the DVR OFF and then back ON. It should now record with the correct time stamp. You will also notice that the userconfig.txt file is now missing from the top level of your DVR.

Watching your videos: Your videos will record in .AVI format and they should playback well in your favorite PC player (i.e., Windows Media Player). If you have any trouble playing the video files, then please download the free player at: www.videolan.org. It is safe, free, easy to use, and we've found it to be very dependable in playing the most modern types of video and audio files.

USB Mass Storage: Carry 4GBs of your most important files with you. Each DVR has a built in USB plug that connects directly to your PC. You just plug it into the USB port and it appears as a removable drive. There is no other device to carry. You can drop and drag your files just like you do on your computer. Not only that, but you can store all of your typical PC files on your Key Chain DVR: Word documents, Excel files, image files, etc.

➔ ALWAYS RECORD LEGALLY – CONSULT YOUR ATTORNEY IF EVER IN DOUBT.

The Geek Factor, LLC.
www.spy-tronix.com
www.thegeekfactor.com
www.the-geek-factor.com

(2009 – all rights reserved)

