

Simple Usage Tips: **DELUXE 4GB Keychain** Hidden Camera (DVR)

Battery Life: The DVR camera will record until the internal battery is drained, until you turn it OFF, or until the memory is full. A full 2-3 hour charge of your key chain will allow for up to 1.5 hours of recording. During charging, the **BLUE LED** will be on STEADY.....when the **BLUE LED** light disappears – it is fully charged.

(1) Press and HOLD the power button to turn it ON. Press and HOLD the power button for 2-3 seconds to turn it back OFF.
(2) Once it is powered ON – the BLUE LED light will shine STEADY. **Auto-Shutoff Feature:** If the BLUE light is on steady and no buttons are pressed for 15 seconds – the automatic shutoff feature will turn the DVR off to save your battery power.

→ → Once you have powered it ON and the **BLUE** light is ON steady.....

Still Photos: Press and release the Photo/Video button to take a still image/picture. The BLUE light will turn off then back on.

Full Color Video with Audio: With the BLUE light ON steady, press and HOLD the Photo/Video button until the BLUE light begins to blink. After it blinks or flashes 3 times - it will disappear completely and you will be recording video. Press and release the Photo/Video button again to stop and save your video – the BLUE light will reappear.

To Set the Time and Date Stamp: Your Key Chain DVR Camera is capable of marking your recordings with a Time and Date Stamp - great for evidence. Connect your Key Chain DVR to your PC's USB port – find the correct drive letter that it has been assigned – and open up the memory to the DVR. Then, go to our FAQ page at www.spy-tronix.com/FAQs.html Download our (.txt) template for the KEYCHAIN DVR and save it directly into the memory of your DVR. Open it up and enter in YOUR current date and time in the form of: YYYY-MM-DD HH:MM:SS for example **2008-08-14 14:25:00**.

→ Then, after you've correctly typed your current time and date in the format above, save this file and close it. Correctly remove the DVR from the computer. Turn the DVR OFF and then back ON. It should now record with the correct time stamp. You will also notice that the userconfig.txt file is now missing from the top level of your DVR.

Watching your videos: Your videos will record in .AVI format and they should playback well in your favorite PC player (i.e., Windows Media Player). If you have any trouble playing the video files, then please download the free player at: www.videolan.org. It is safe, free, easy to use, and we've found it to be very dependable in playing the most modern types of video and audio files.

USB Mass Storage: Carry 4GBs of your most important files with you. Each DVR has a built in USB plug that connects directly to your PC. You just plug it into the USB port and it appears as a removable drive. There is no other device to carry. You can drop and drag your files just like you do on your computer. Not only that, but you can store all of your typical PC files on your Key Chain DVR: Word documents, Excel files, image files, etc. But always use your "Safely Remove Hardware" tool in your Windows desktop tray before disconnecting your keychain; not doing this will induce error into your keychain over time.

Reset Button: Should your keychain DVR lock up much like your computer does – or your computer will not recognize it, then simply use a paper clip or similar small item to press the RESET button on the left side of your keychain - (about one inch to the right of the USB port).

→ ALWAYS RECORD LEGALLY – CONSULT YOUR ATTORNEY IF EVER IN DOUBT.

The Geek Factor, LLC.
www.spy-tronix.com
www.thegeekfactor.com
www.the-geek-factor.com

(2010– all rights reserved)

