

Saving files for your Camera Binoculars

- 1) Follow the instructions in the manual and take your images (pictures) with the binoculars.
- 2) Load the included CD into your computer and install the DC DRIVER. This will install the Digital Camera driver and the MYDSC2 program onto your hard drive. The MYDSC2 program is the interface that will allow you to view and to save your captured images from your binoculars. The MYDSC2 program will install in about 1-2 minutes and will require a restart on your computer for the program to operate.

** You can also load the free ARC imaging software as desired, but it is not required to view your camera images.
- 3) After installing the MYDSC2 program and restarting your computer, connect your binoculars to your USB port using the included USB cable. Look for the MYDSC2 icon on your desktop (or in your program files) and click on the icon to open the program.
- 4) Click on the Downloaded Photos button (see image below) and the software will pull the images from your camera binoculars into your computer.
- 5) Now, when you can see your photos in the tiny gray rectangles of the MYDSC2 interface, click on the SAVE button (see image below) at the bottom center of the MYDSC2 screen. (It looks like a floppy disk.)
- 6) Now, the MYDSC2 program will ask you where you want to save the files. Choose a place that you will remember or create a file of your own where you can always save your pictures and remember where they are stored.


From here, you can edit the images with the included software – or software already installed on your computer. That's it! After just a few uses, the camera binoculars will become second nature to you. Enjoy!

The Geek Factor

www.spy-tronix.com

www.thegeekfactor.com

www.the-geek-factor.com

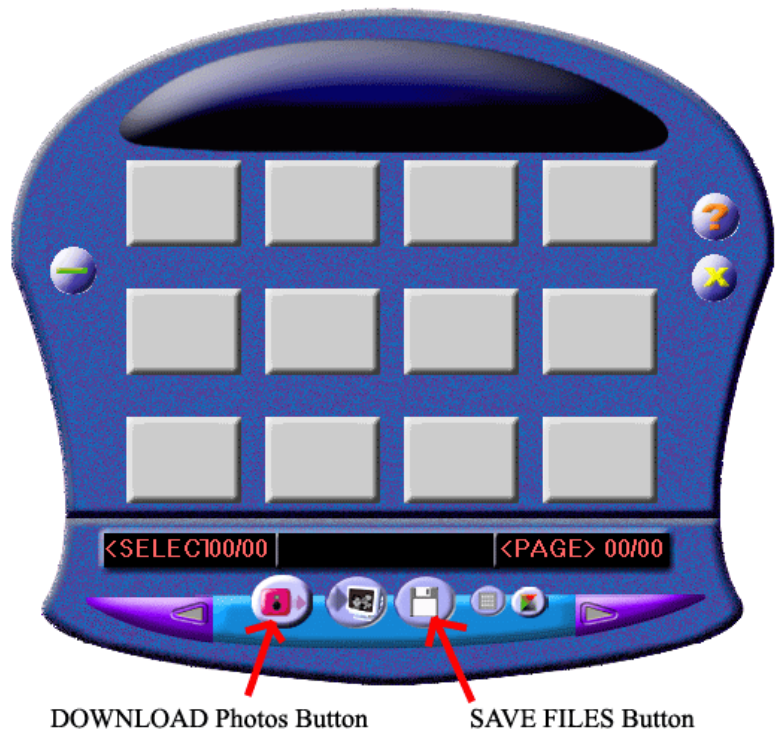

DOWNLOAD Photos Button

SAVE FILES Button